


FORMING FACT

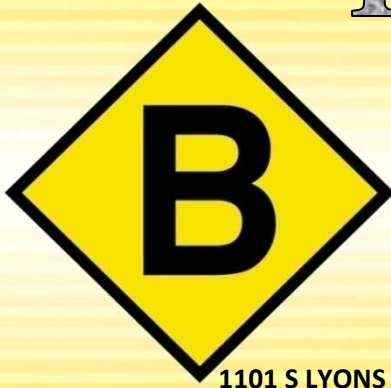

BIERSCHBACH EQUIPMENT & SUPPLY

1101 S LYONS AVE
SIOUX FALLS, SD 57101
1-800-843-3707

3030 N PLAZA DRIVE
RAPID CITY, SD 57709
1-800-658-5437

2121 LEECH AVE
SIOUX CITY, IA 51106
1-800-243-3707

4001 MAIN AVE
FARGO, ND 58103
1-800-540-2760

TAPER TIE HOLE PLUG



THE P120 X-PLUG IS A MECHANICAL PLUG SPECIFICALLY DESIGNED TO SEAL THE VOID FORMED IN CONCRETE WALL BY THE REMOVAL OF A TAPER TIE ROD. THE P120 X-PLUG IS EASILY ENGAGED INTO THE TIE ROD VOID DURING ALL CLIMATES. WITH THE P120 X-PLUG'S MECHANICAL DESIGN, TIGHTENING OF THE METAL NUT CAUSES AN EXPANSION OF THE PLUG, INCREASING ITS DIAMETER INSIDE THE TAPER TIE ROD VOID. THIS ACTION SIMULTANEOUSLY COMPRESSES THE MAIN BODY PLUG ONTO THE BOLT TO CREATE AN UNMATCHABLE SEAL BETWEEN THE PLUG AND THE WALL OF THE TAPER TIE VOID. THIS ADVANCED SEALING DESIGN AND METHOD, WILL SAVE YOU TIME AND MATERIALS.

INSTALLATION STEPS:

STEP 1: CLEAR TIE VOID OF ALL LOOSE DEBRIS. A TAPER TIE VOID BRUSH IS RECOMMENDED.

STEP 2: CHECK PLUG ENGAGEMENT, PLUG SIZES FOR CORRESPONDING TAPER TIES WILL SEAT 50-60% OF WALL THICKNESS FROM THE FACTORY.

STEP 3: ATTACH THE 7/16" INSTALLATION EXTENSION TO THE HANDHELD DRILL. PLACE NUT SIDE OF PLUG INTO SOCKET SLIDE INTO VOID. PLUG WILL STOP WHEN SEATED TO TAPERED VOID, FULLY TIGHTEN NUT.

STEP 4: ONCE THE NUT HAS BEEN TIGHTENED, THE TAPER TIE VOID CAN THEN BE BACKED WITH SYMONS GROUT.



**WATCH INSTALLATION VIDEO AT: http://www.eliteproductspage.com/install_video.html